


QUICK START GUIDE




onn • Roku TV

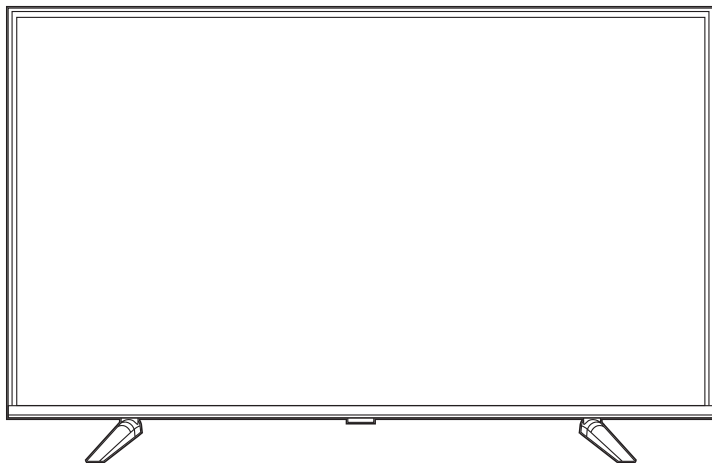

Overview


What's included:

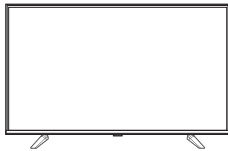


onn • Roku TV



 BT Voice Remote



**2 x AAA Batteries
for Remote**

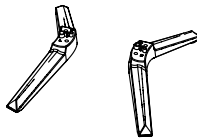

TV Stand



Screws

Tools required:



**Phillips
Head
Screwdriver**




**Wireless
Router
(needed for
streaming)**



**Computer,
Tablet, or
Smartphone
(needed for setup)**



**Internet
Connection
(needed for
streaming)**

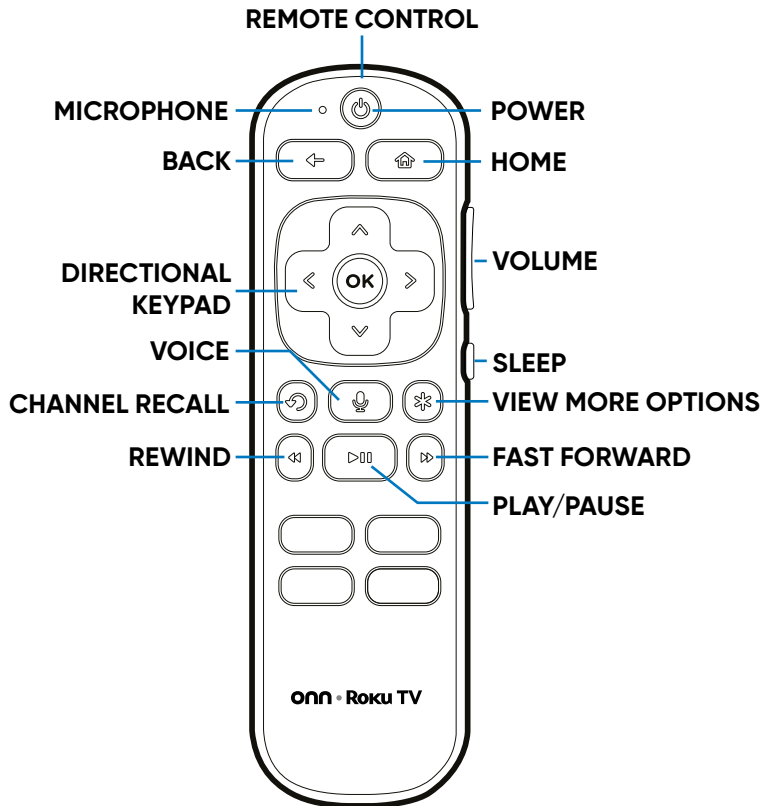

Power your TV remote by inserting the included batteries carefully matching (+) and (-) indicated inside the battery compartment.

For product assistance & missing or replacement parts:

WE CAN HELP

1-844-334-2355

7 DAYS/WEEK 9:00am – 9:00pm EST

ONLINE CHAT:

onntvsupport.ca

EMAIL:

customerservice@onntvsupport.com



SCAN HERE

Register your product to activate
your two-year warranty.*

*1-year manufacturer's limited warranty with purchase, or 2-year limited warranty with product registration within 90 days of purchase. See warranty card for details.

Find more at **Walmart.ca**

We recommend keeping your TV box for the duration of
your warranty. See your product warranty for details.


Assembly

1. INSTALLING THE STANDS

Using a **Phillips screwdriver**

Do not install the stands if you want to wall mount your TV. See your wall mount instructions for mount installation details.

1. Place the TV screen-down on a clean, flat, soft surface (e.g.: blanket) to prevent scratches or damage to the screen.
2. Use a Phillips screwdriver to attach each stand with the provided screws.
3. Place the TV upright on a stable, level surface.

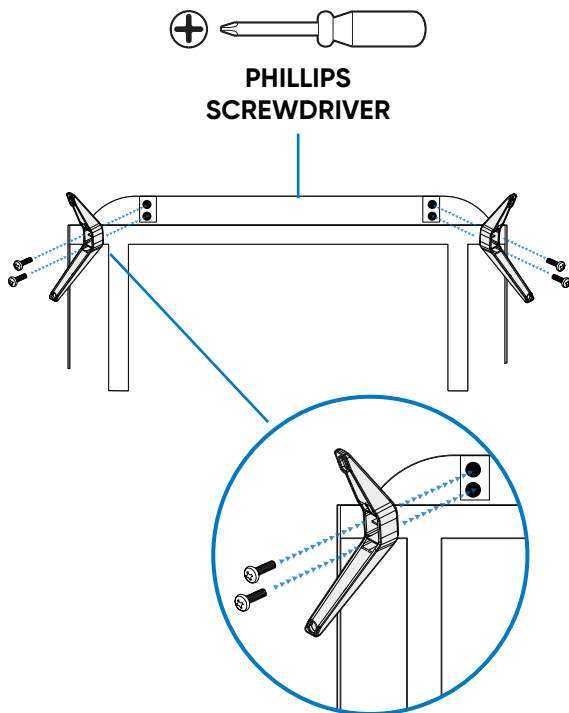


2. CONNECTING DEVICES

HDMI

connect a Blu-ray,
DVD player, gaming
console or other devices

 
Best Quality



DIGITAL OPTICAL

connect an external
digital audio system

 Better Quality



MINI AV

connect an external AV device,
Mini AV adapter included

Good Quality



COAXIAL

 
connect to
antenna/cable



2. CONNECTING DEVICES (continued)

LAN

wired connection
to the internet (4K models only)



USB

connect for photos, music,
movies and more



CONNECTING TO POWER

After connecting all your devices, connect the power cord to a power outlet. The TV enters standby mode and its indicator light turns red.

Setup

ACTIVATION:

Have your wireless network name and password handy.

Follow the on-screen instructions on your onn Roku TV. If you aren't ready to connect your TV to a wireless network, you can still use it as a regular TV.

Activate your onn Roku TV using your computer, smartphone, or tablet to link to a Roku account. You need a Roku account to activate your onn Roku TV and access entertainment across thousands of streaming channels.

NOTE:

Roku doesn't charge for activation support – **beware of scams.**

PAIRING THE REMOTE:

1. Power your TV remote by inserting the included batteries carefully matching (+) and (-) indicated inside the battery compartment. The TV is now in pairing mode automatically.
2. If the TV does not automatically enter pairing mode, press and hold the Home and Back buttons on your remote for 5 seconds or until the light starts flashing.
3. Wait up to 30 seconds while your onn Roku TV connects with the remote. Once paired, a message will appear, "Remote paired successfully."

Visit go.roku.com/tvmanual
for the complete Roku User Guide.